

**MODERN YARD**

GATE FRAME


71x42 Inches Welded Gate Frame Installation

1

1 PC




12 PCs

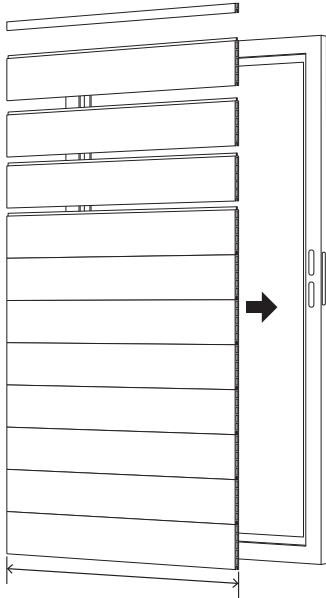

Cut the boards 37-1/8 to 37-1/4 inches

2


4 PCs

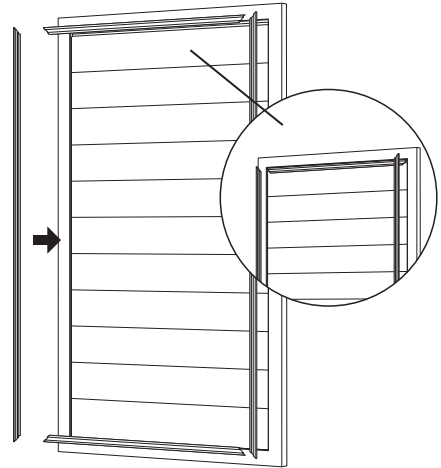


Start by installing the short edge covers on the top and bottom, followed by the long edge covers on the sides. Arch the cover slightly to insert both ends first, then use a rubber mallet to tap from the ends toward the center for a secure fit.

3

18 PCs

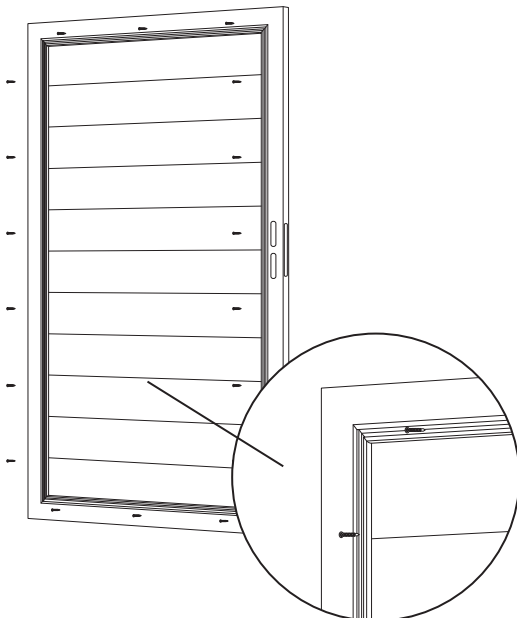**4**

4 PCs

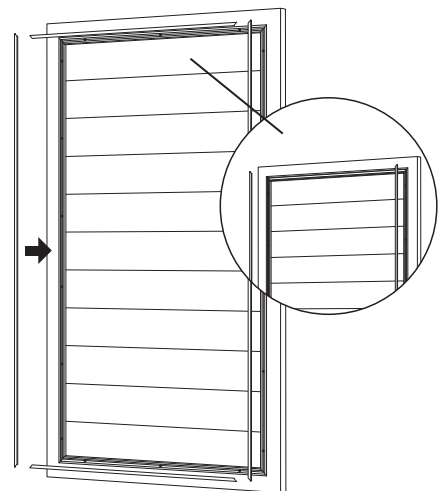

Start by installing the short cover tops on the top and bottom, followed by the long cover tops on the sides. Arch the cover slightly to insert both ends first, then use a rubber mallet to tap from the ends toward the center for a secure fit.